Tel: +32 3 766 02 02 Fax: +32 3 766 10 67



CRANKCASE "OIL TAP"

- The "OIL TAP" is installed on a semi-hermetic compressor for the changing of oil and testing procedures. The internal pressure helps discharging the oil from the crankcase and ACID TESTS can be made while the compressor is running. You can prevent "BURN-OUTS". In the same way it allows the addition (by vacuum) or removal (by pressure) of oil.
- vacuum) or removal (by pressure) of oil.
 Also, you can detect hazardous refrigerant pooling in the crankcase before start-up and control the removal using a compound gauge. It can be permanently installed.

